

Drawer Assembly

METABOX 326-C15 Series



- Lock drawer front into flange key holes.
- 3. Tighten screws clockwise to lock.

Drawer Front Adjustment

- Loosen screws in back of drawer front.
- 2. Adjust drawer front up or down and sideto-side
- 3. Retighten screws after adjustment.







Drawer adjustments

METABOX series

(See inside for adjustments.)



Blum, Inc. 7733 Old Plank Rd. Stanley, NC 28164 toll free 800-438-6788 local 704-827-1345 fax 704-827-0799 internet www.blum.us



Subject to technical modifications without notice © 2005 Blum, Inc.

METABOX / Clip front fixing bracket

METABOX / screw on front fixing bracket

Side adjustment



 Loosen 2 screws on each bracket that attach front.
 Adjust drawer front.
 Tighten screws.
 Range = 1/8" (3mm)



Height adjustment



Height Up: Rotate adj. cam.





- 1. Back off height adj. cam
- 2. Open cover with POZI driver and push drawer front down, close cover.
- 3. Rotate cam to bring drawer front up into position.









Side adjustment

Loosen 2 screws on each bracket that attach front.

- Adjust drawer front.
 Tighten screws.
- Range = 1/8" (3mm)



Height adjustment



1. Loosen top fixing screw

- on bracket. 2. Turn bottom cam screw
- to adjust height.
- 3. Tighten fixing screw.
 - Range = 5/32" (4mm)



Tilt adjustment



For taller drawer with gallery rails.

Turning the rails by hand extends or reduces their length which tilts the drawer front.

