



www.MLMEBLE.pl

GB

D

CZ

SK

RUS

LT


assembly instructions / montageanleitung / montážní návod / montážny návod / инструкции по монтажу / surinkimo instrukcija



INSTRUKCJA MONTAŻU

PIK 05 N


↑53 →90 ↗36

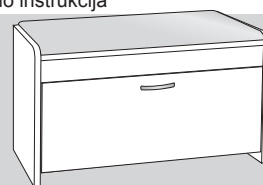


akcesoria / accessories / zubehör / příslušenství / prislušenstvo / аксессуары / furnitūra :


x 12 KK 8/30	x 6 KT 7/60	x 4 WT 3,5x16	x 18 WT 3x16	x 4 WT 4x30	x 2 WT 4x35	x 1 klej / glue / kleber / lepidlo / lepidlo / клей / klijai	x 1 kluczyk / key / schlüssel / klíč / klūč / ключ / raktas
x 2 PK H-0	x 2 ZA 110°	x 4 WE 6,3x13	x 50 GZ 1/10	x 6 ZAK	x 2 MB	x 4 PA Ø5	x 1 UT L96
x 1 RN	x 4 SG 8/8	x 1 LT					

do montażu potrzebne są:
are needed for assembly:
sind erforderlich für die montage:
jsou potřebné pro montáž:
sú potrebné pre montáž:
которые необходимы для сборки:
Surinkimui reikės

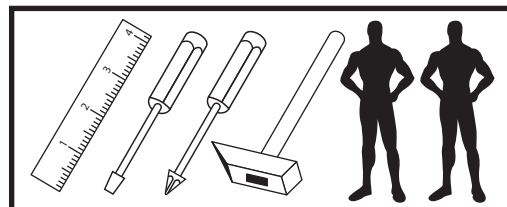

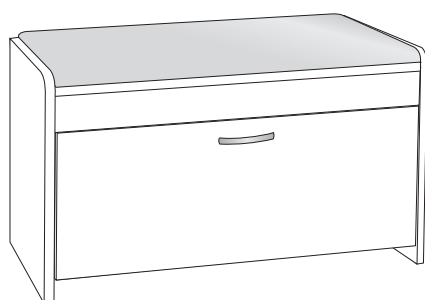

	CODE			
1	PIK05N_01	497	356	1
2	PIK05N_02	497	356	1
3	PIK05N_03	864	320	1
4	PIK05N_04	864	96	2
5	PIK05N_05	859	336	1
6	PIK05N_06	281	75	2
7	PIK05N_07	281	80	1
8	PIK05N_08	863	302	1
9	PIK05NHDF_01	862	291	1
10	PIK05NHDF_02	890	210	1
11	PIK05NHDF_03	890	193	1
12	SIEDZISKO	856	350	1
13				
14				
15				

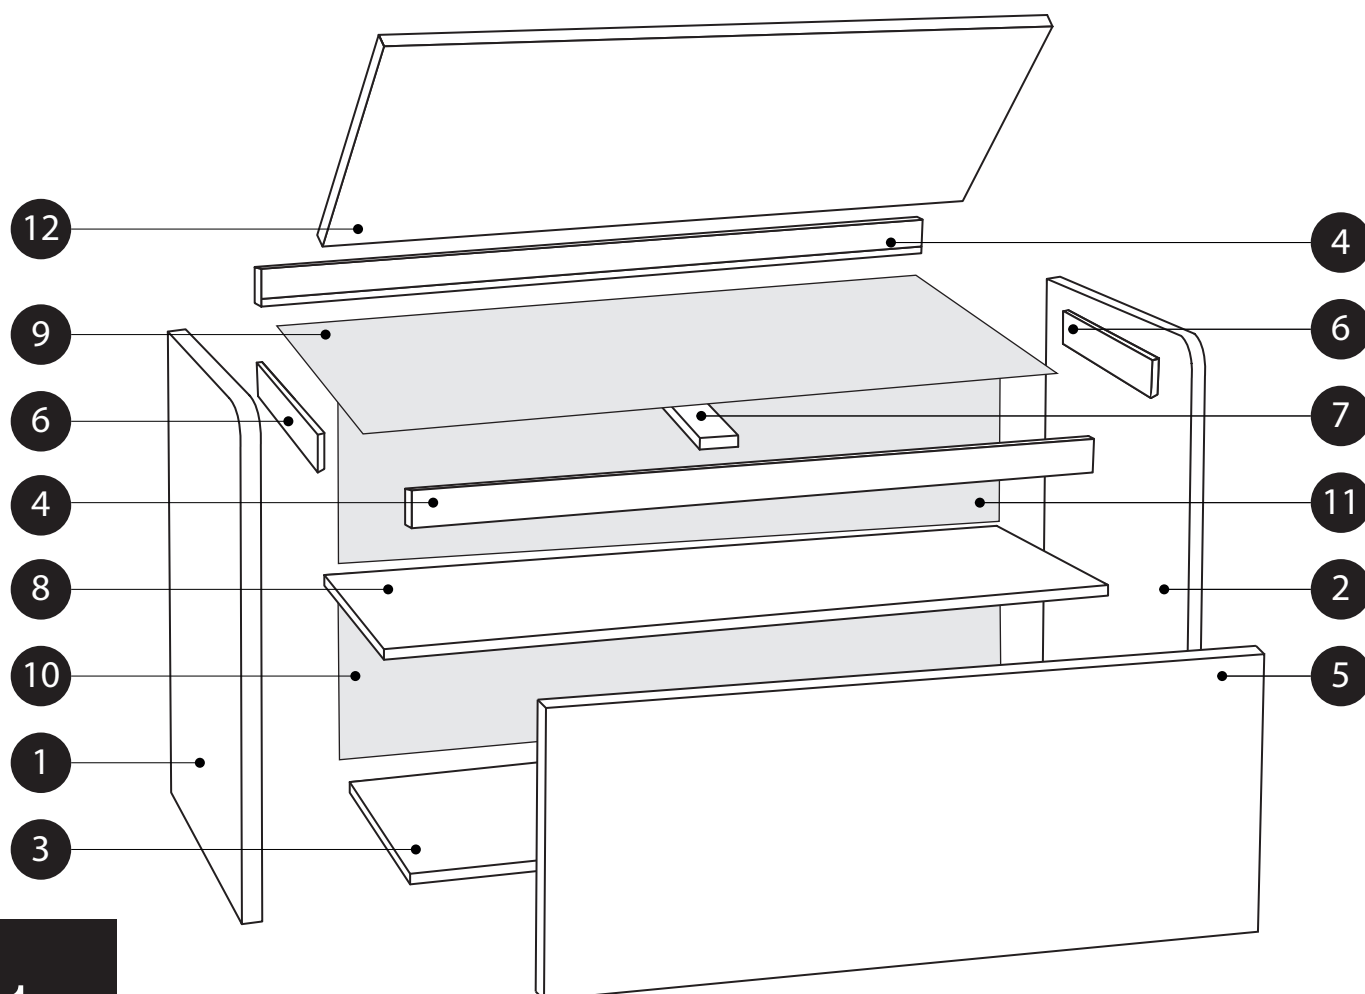

! UWAGA ! - w pierwszej kolejności wbijamy akcesoria „KK” i „MD” w blaty oraz boki.
WARNING! - The first accessory sticks "KK" and "MD" in the tops and sides.
WARNUNG! - Die erste Accessoire-Sticks "KK" und "MD" in den Spitzen und an den Seiten.
POZOR! - První příslušenství holi "KK" a "MD" v korunách a boky.
POZOR! - Prvé příslušenstvo palic "KK" a "MD" v korunách a boky.
ВНИМАНИЕ! - Первый аксессуаров палочки "KK" и "MD" по вершинам и по бокам.
DĚMESIOI! - Pirmiausiai furnitūrą KK ir MD įkalame į stalviršį ir šonus.

