

**70038** C

[www.fantasticfurniture.com.au](http://www.fantasticfurniture.com.au)



# INFINITI

## Lowboy 3 drawer

**Enjoy**  
Your purchase from  
Australia's Best Value Furniture Store



# Assembly checklist




Read through the instructions carefully before you begin.



Make sure you have all the required tools. Never use power tools unless instructed.














Identify and lay out all of the components before you begin assembly.















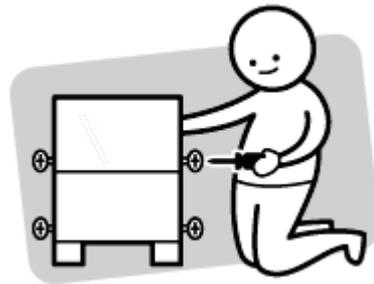



Unless instructed, do not fully tighten screws until the item is fully assembled.

## Useful Information

- ! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.
- ! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.
- ! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.
- ! Bulky items such as wardrobes and bunk beds should be assembled in the room they will be used in as they may not fit through a door once assembled.
- ! Never use any glue until you are certain that the parts belong together.
- ! Periodically check and re-tighten all fasteners. Check the product care label or website for product care instructions.
- ! If you are having any difficulties assembling your product, missing any hardware or components please visit our website Help Centre for further assistance.

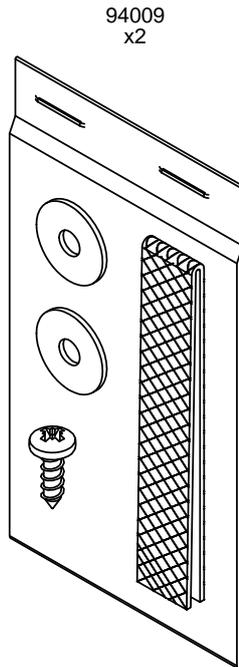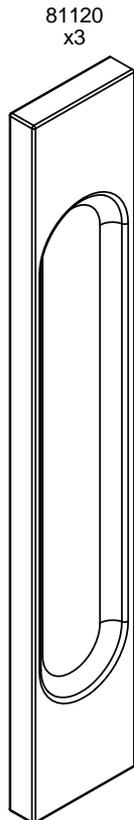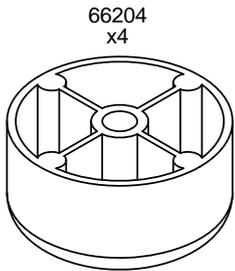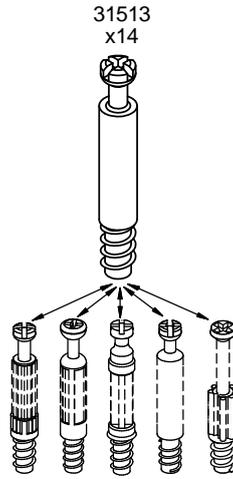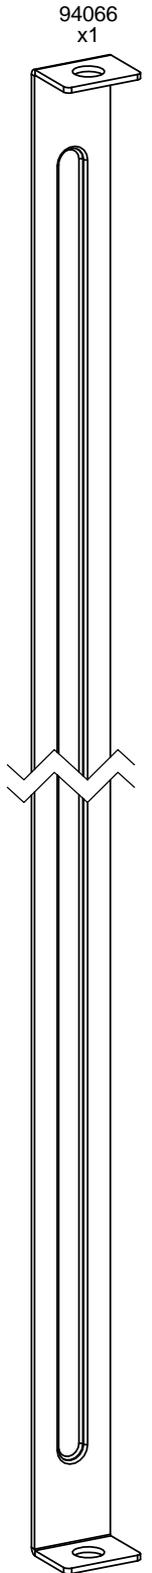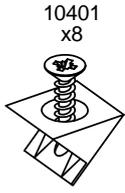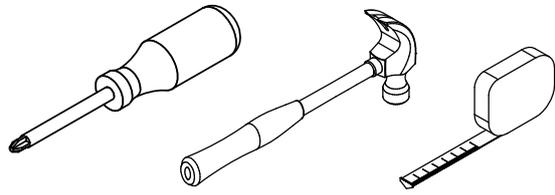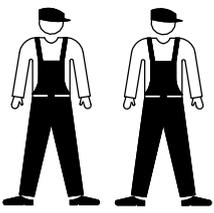

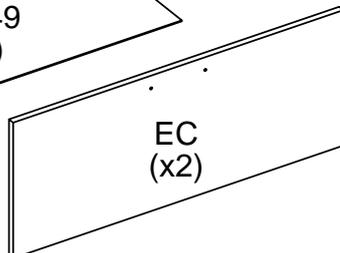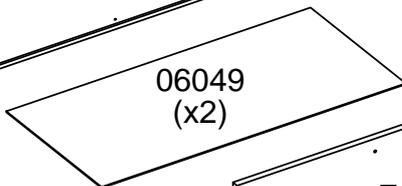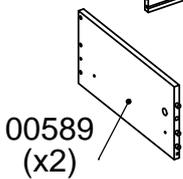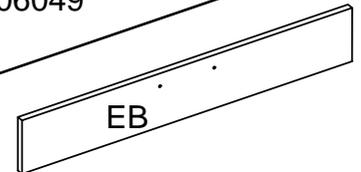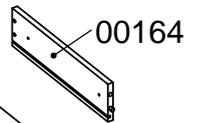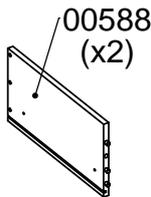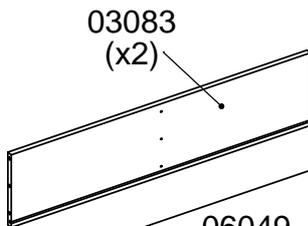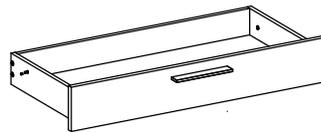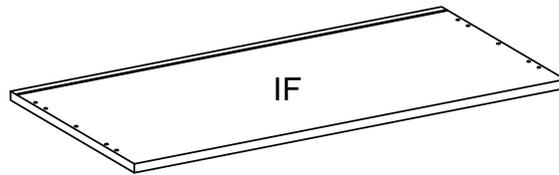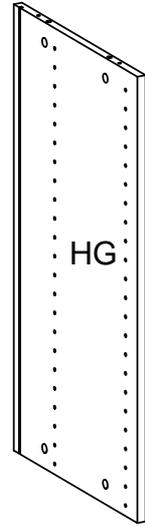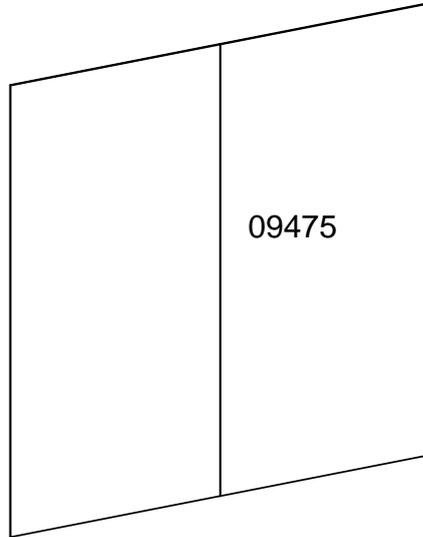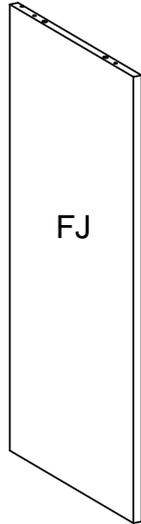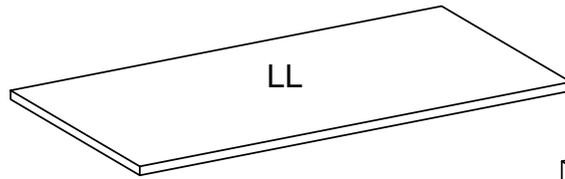
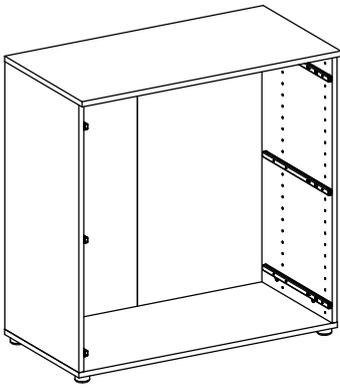


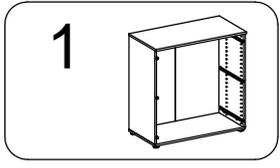


# 20203  
x10








# 31687  
x8




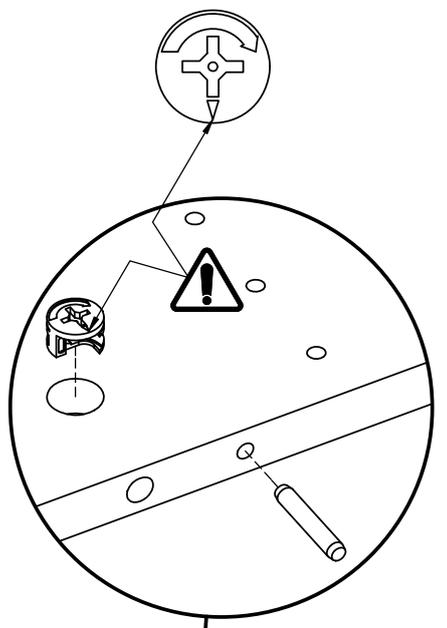
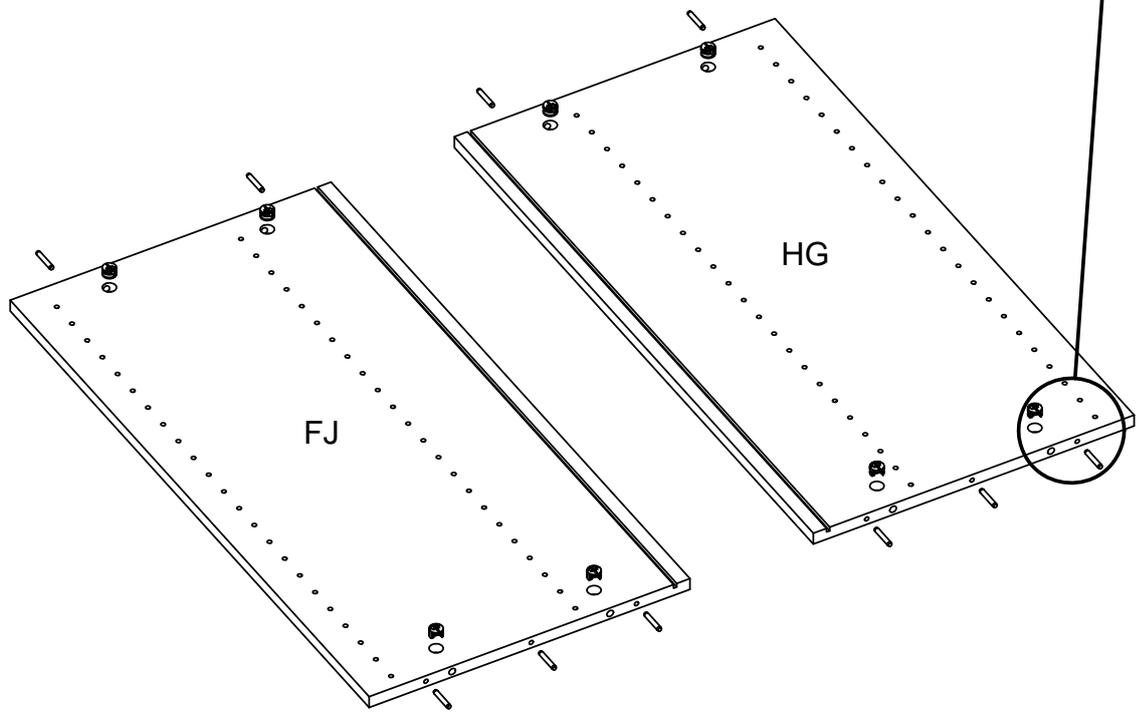





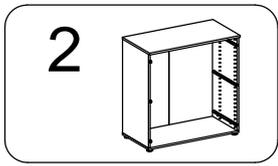



# 25233  
x6

# 26020  
x12

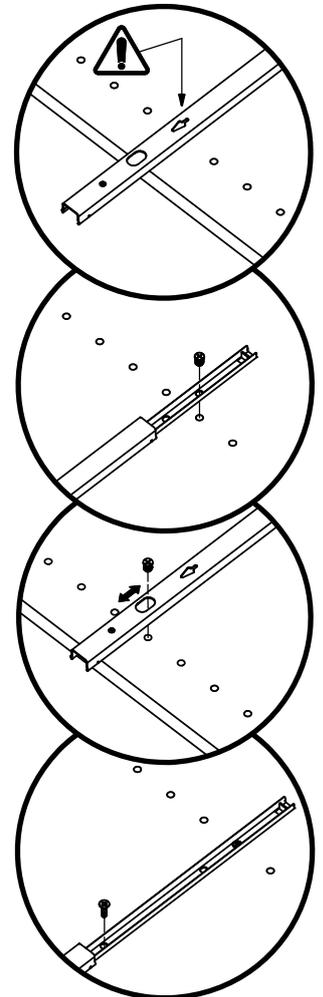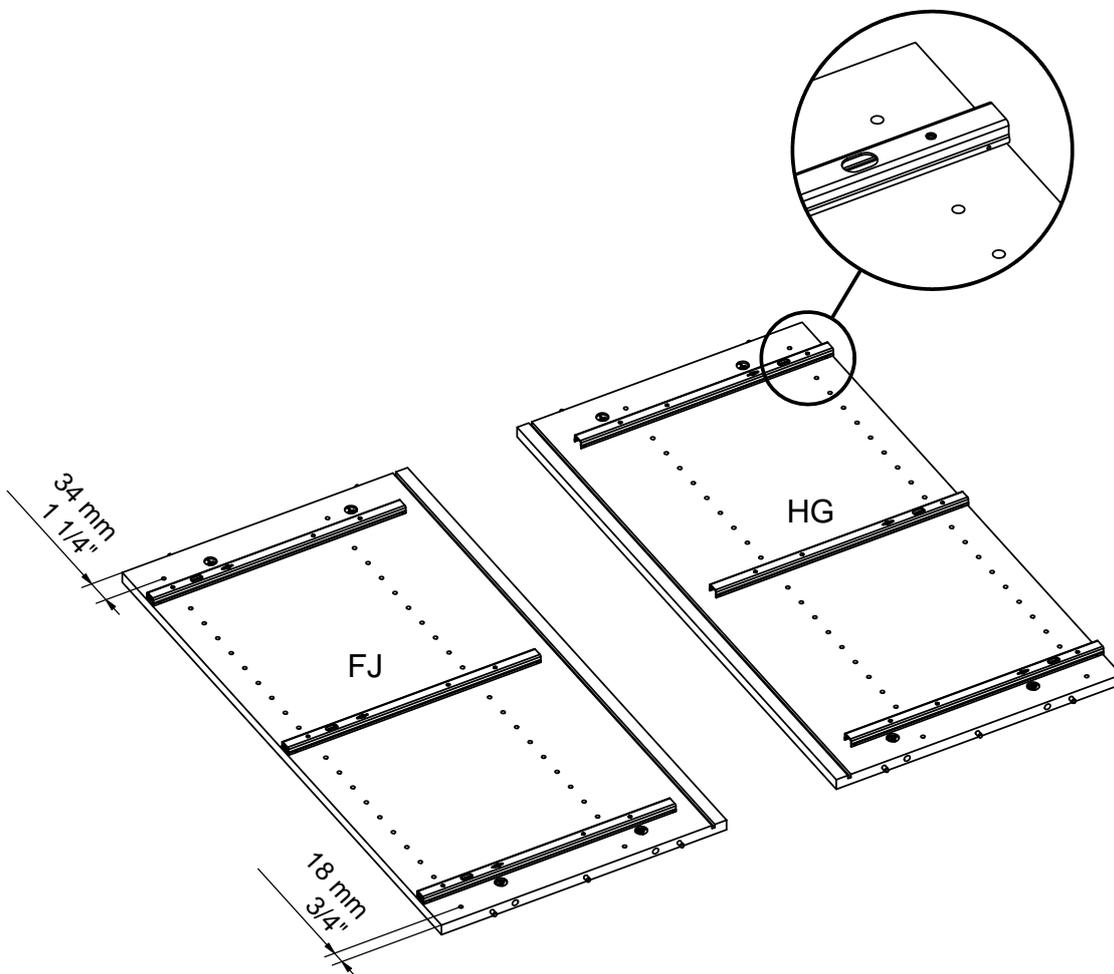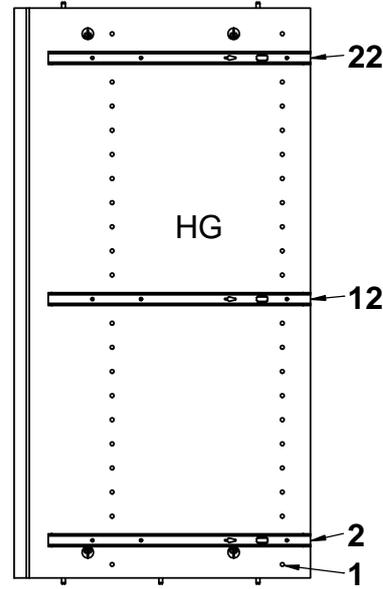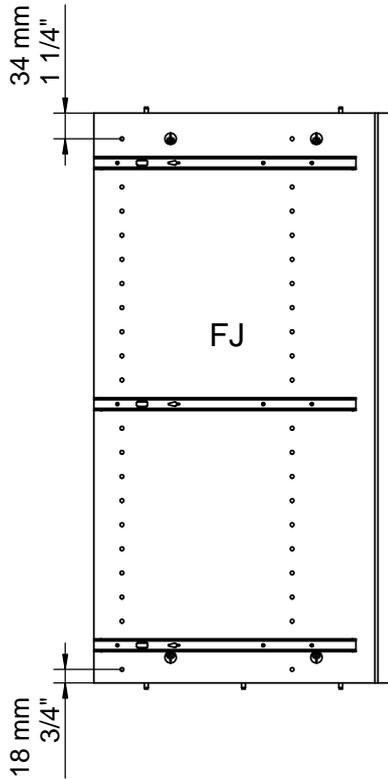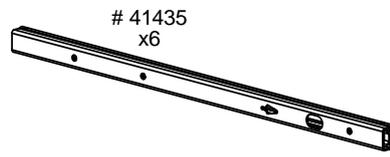

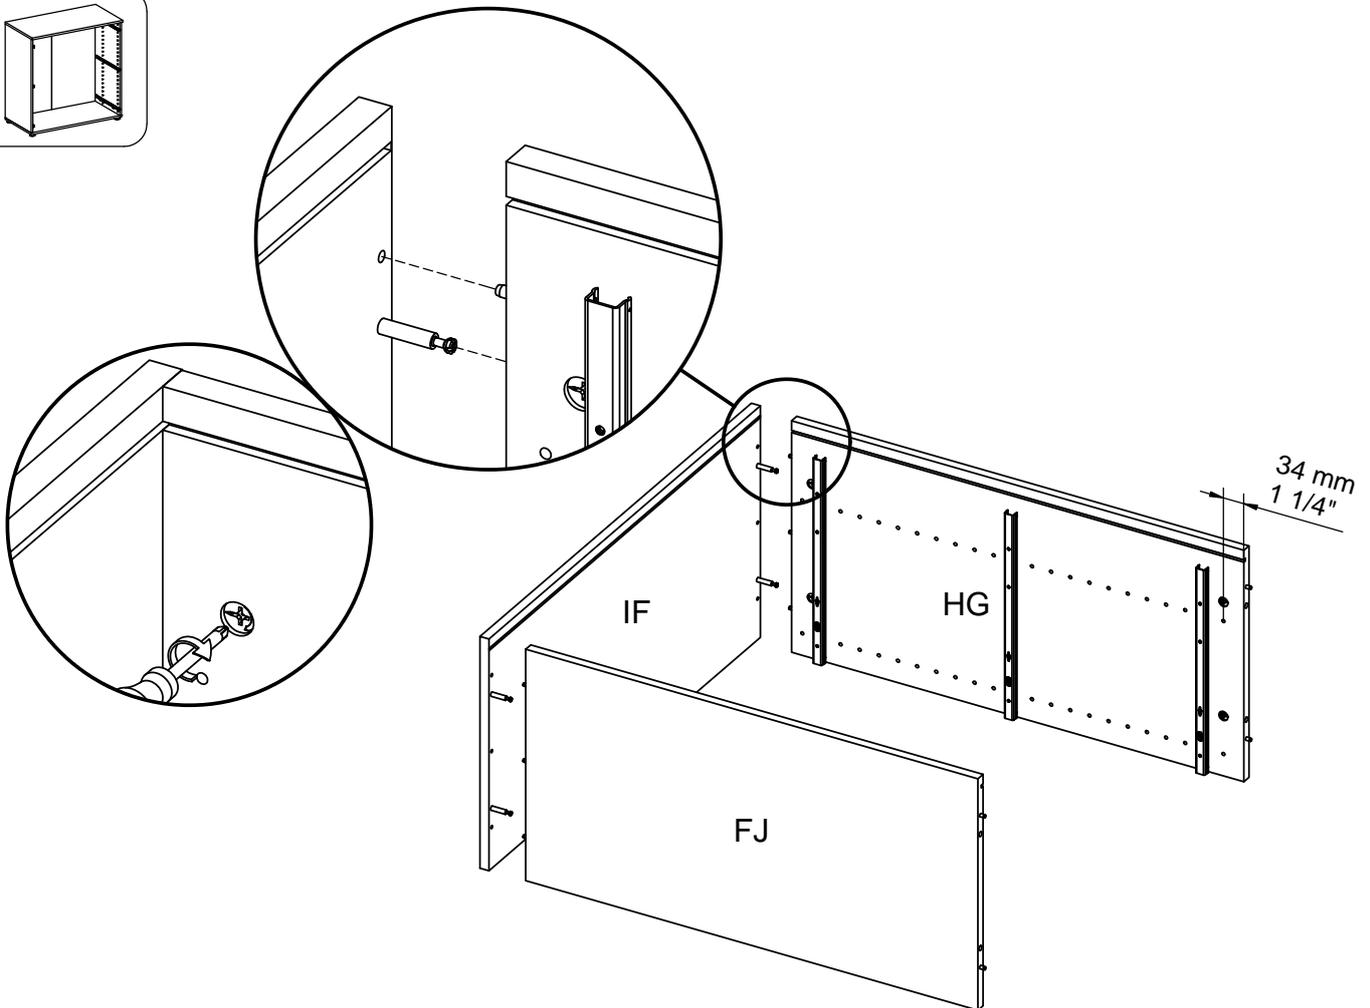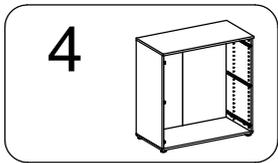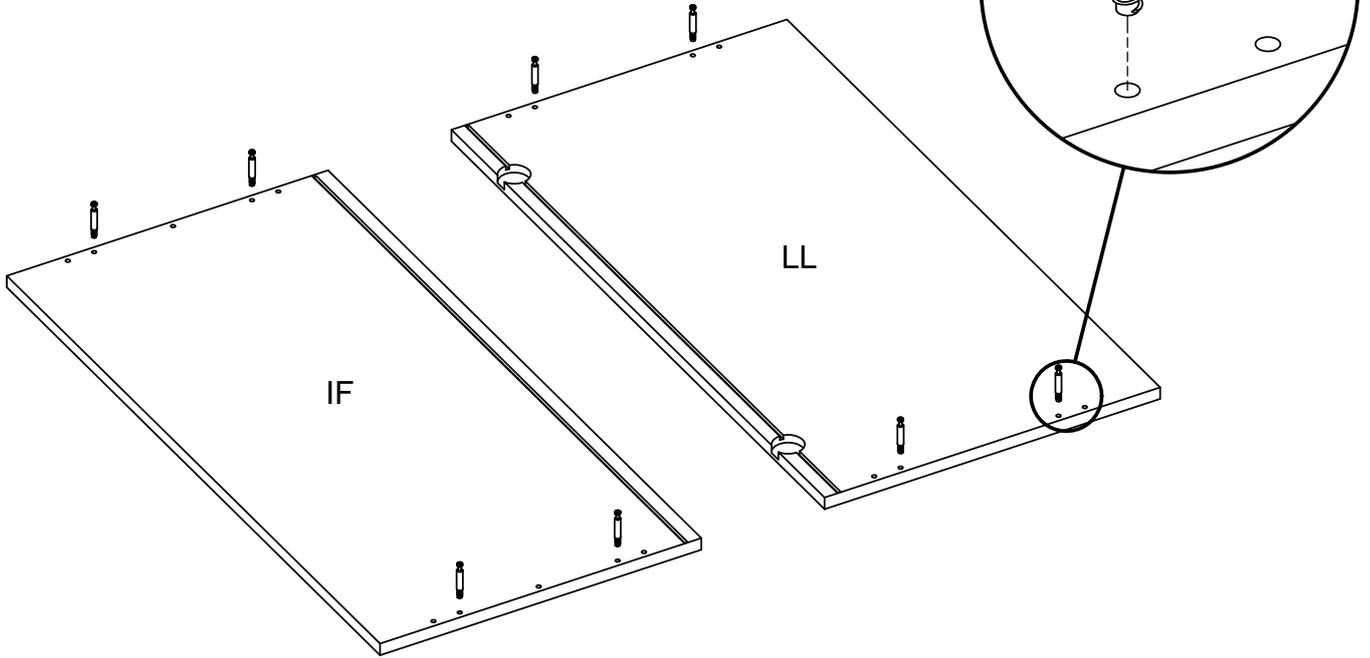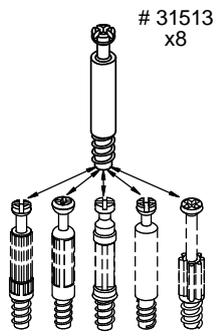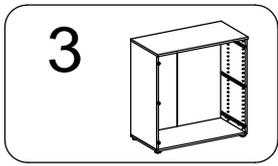

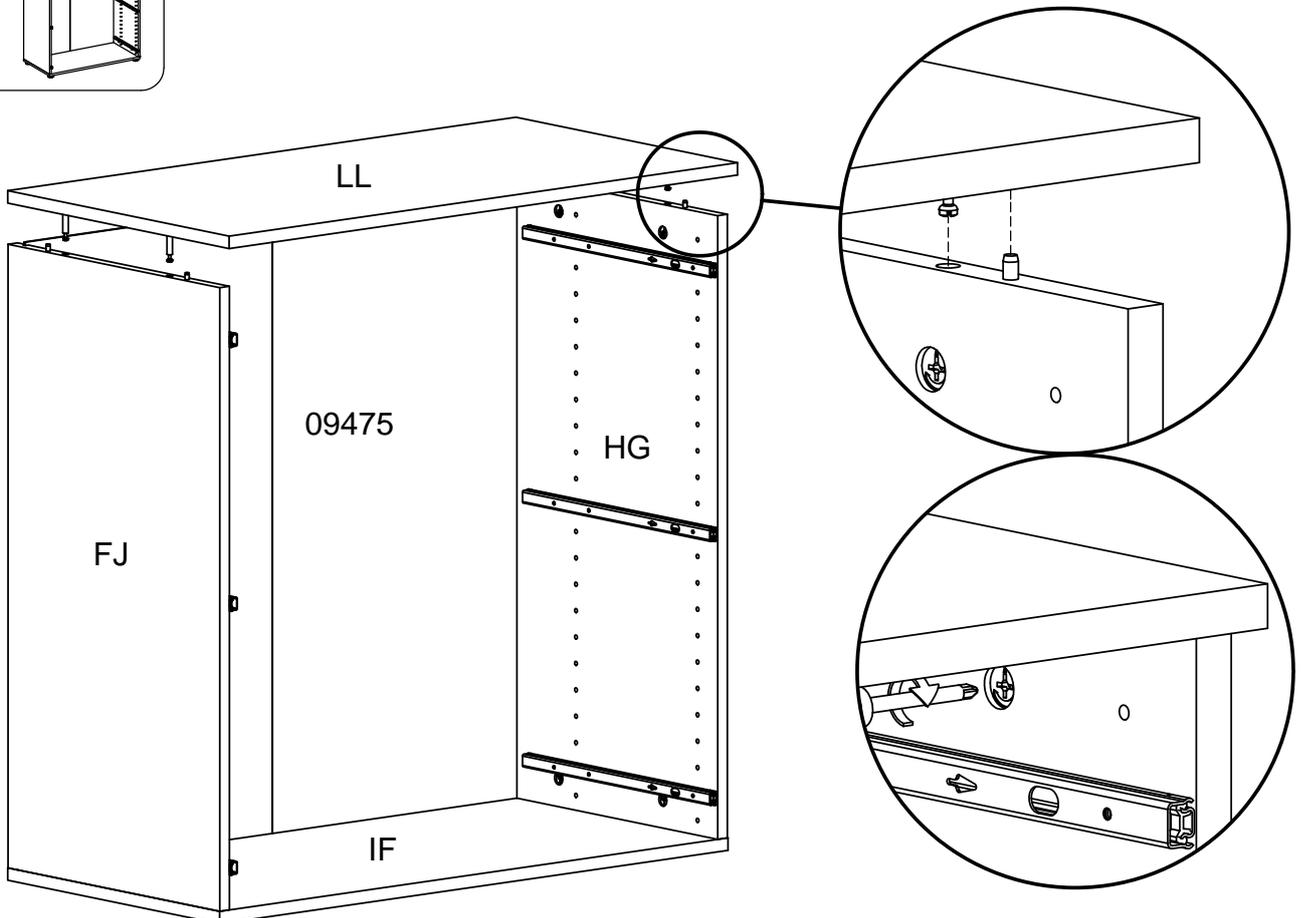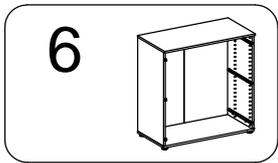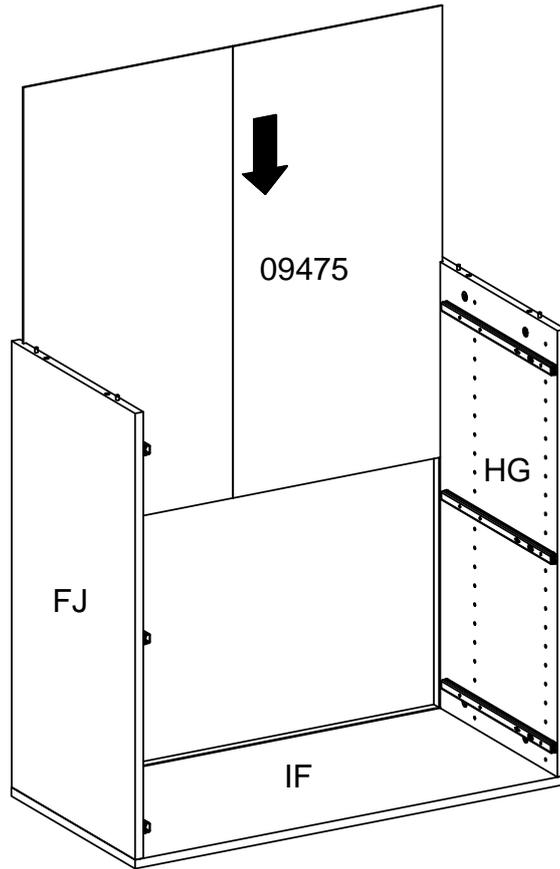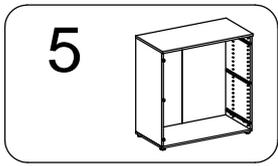

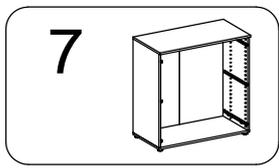


7




# 10401  
x8







# 25259  
x4

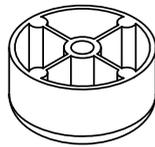


# 66204  
x4

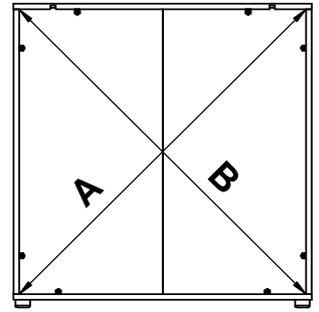

A = B

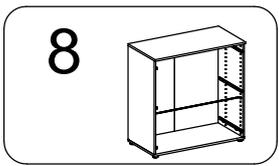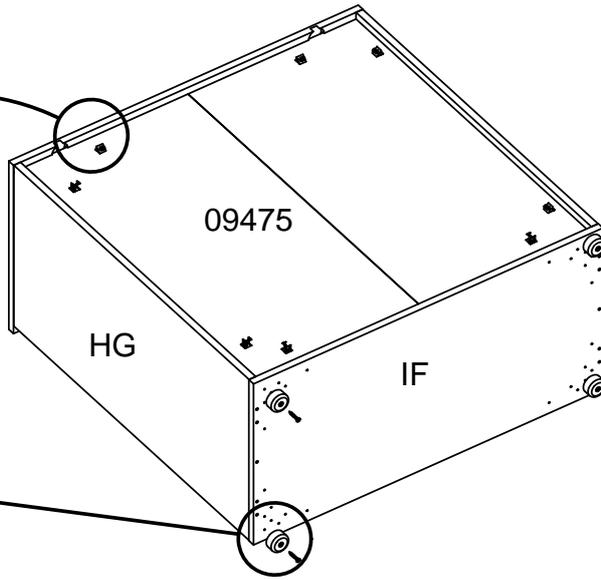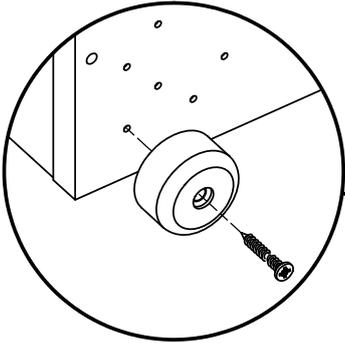


8






# 94009  
x2



# 94066  
x1






















# 26020  
x2

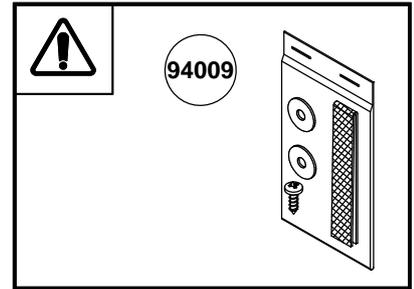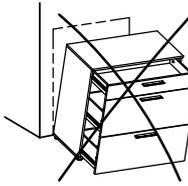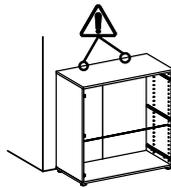


**English (en)**

**IMPORTANT.** The screw supplied together with the anti-topple bracket is to be used only for fixing the anti-topple bracket to the furniture. In addition to this, you will need to choose a screw or fitting which is suitable for securing the bracket to the kind of walls you have. If you are unsure about what type of screw to use contact your local hardware store.

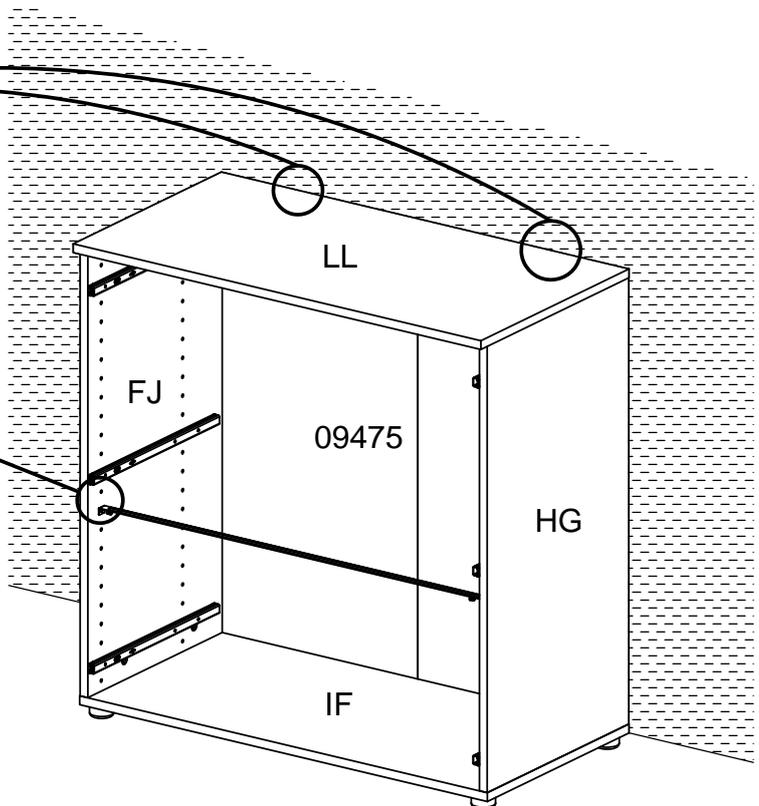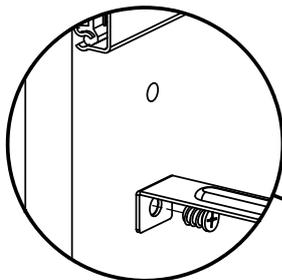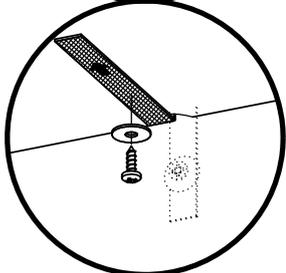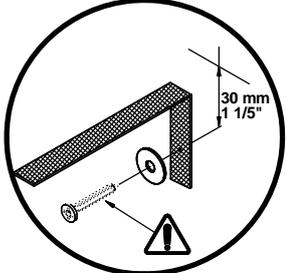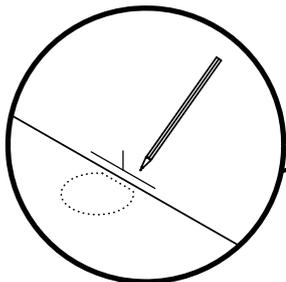


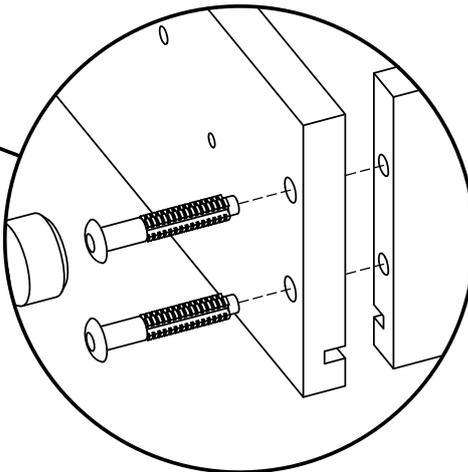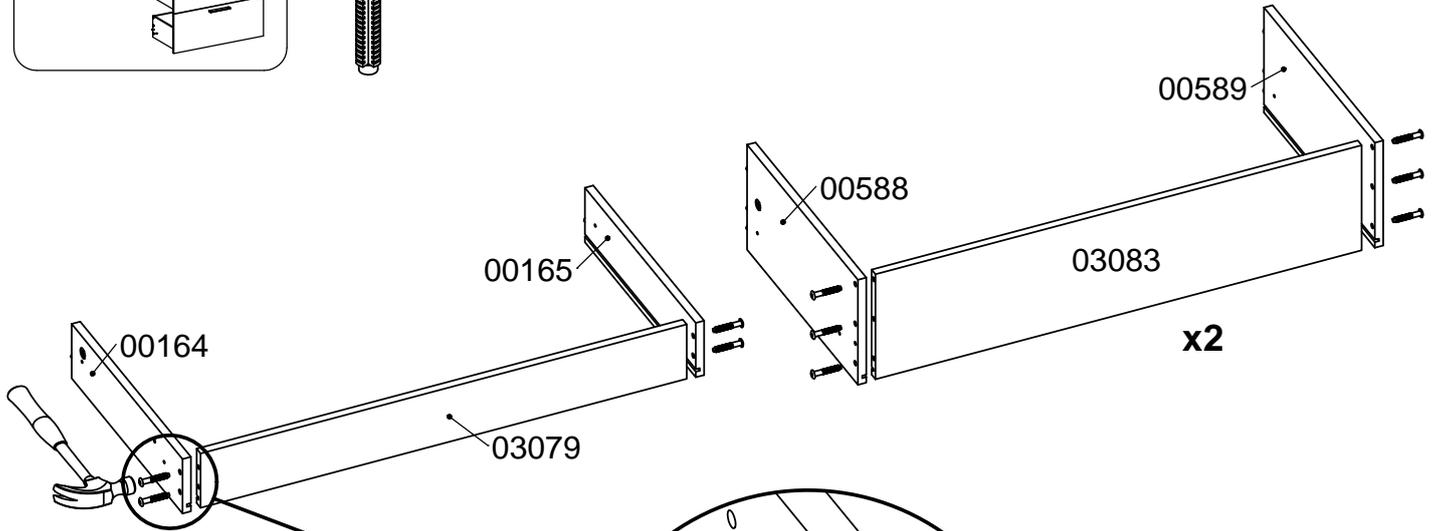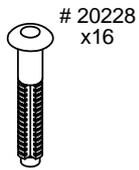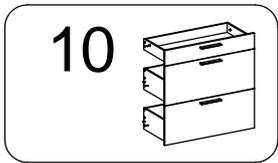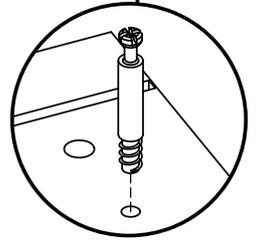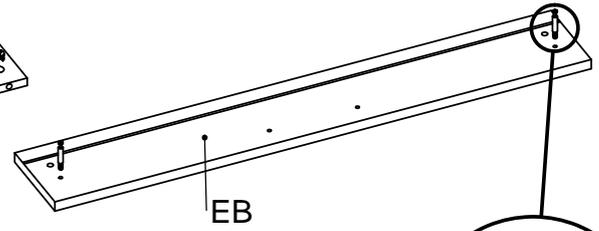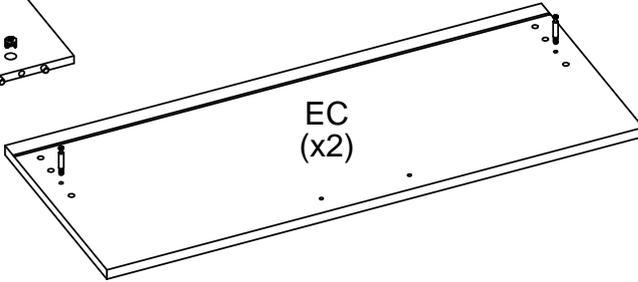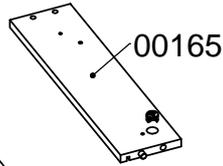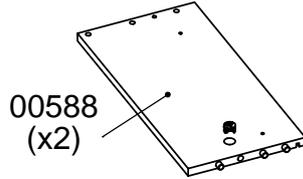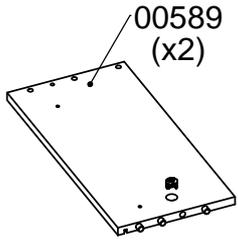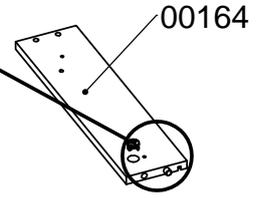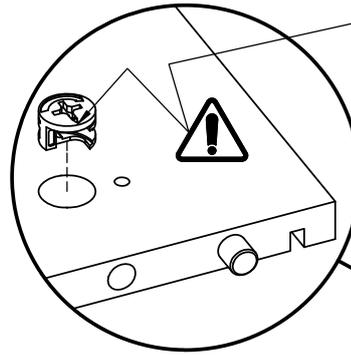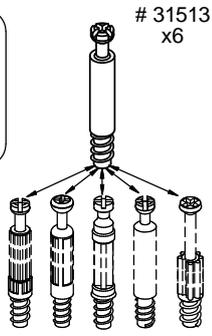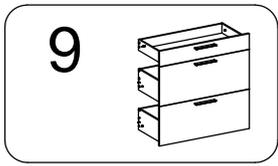


11

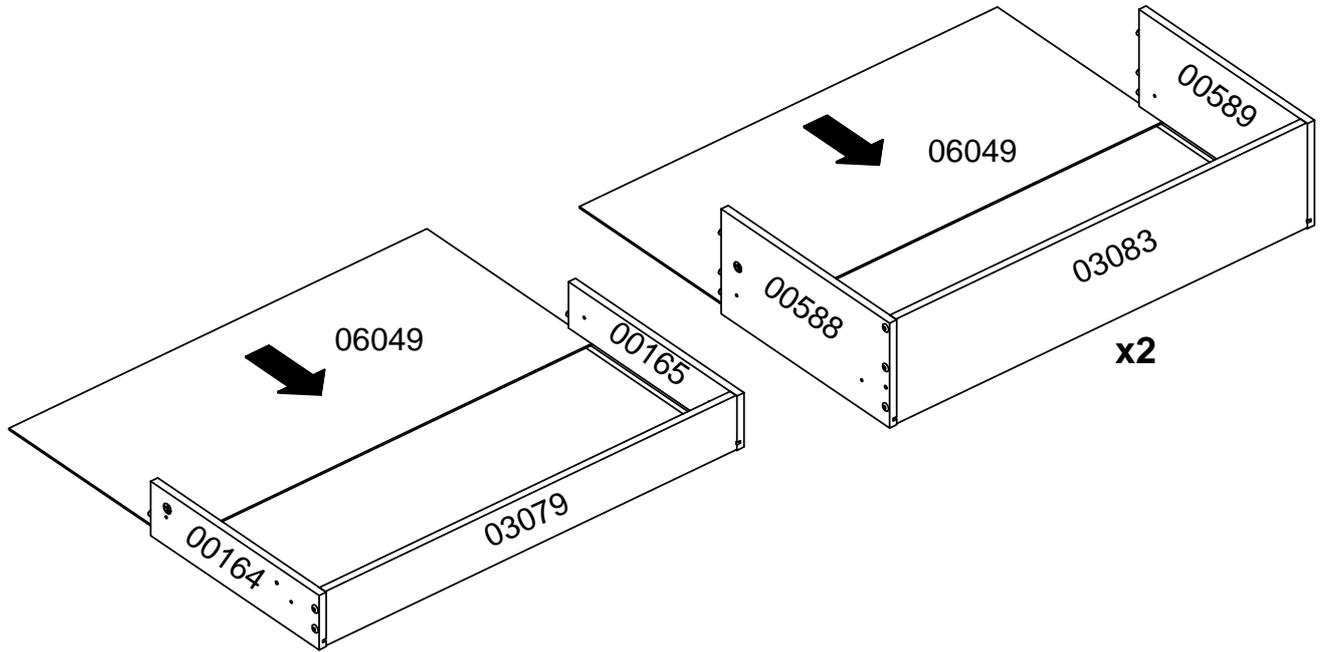

12

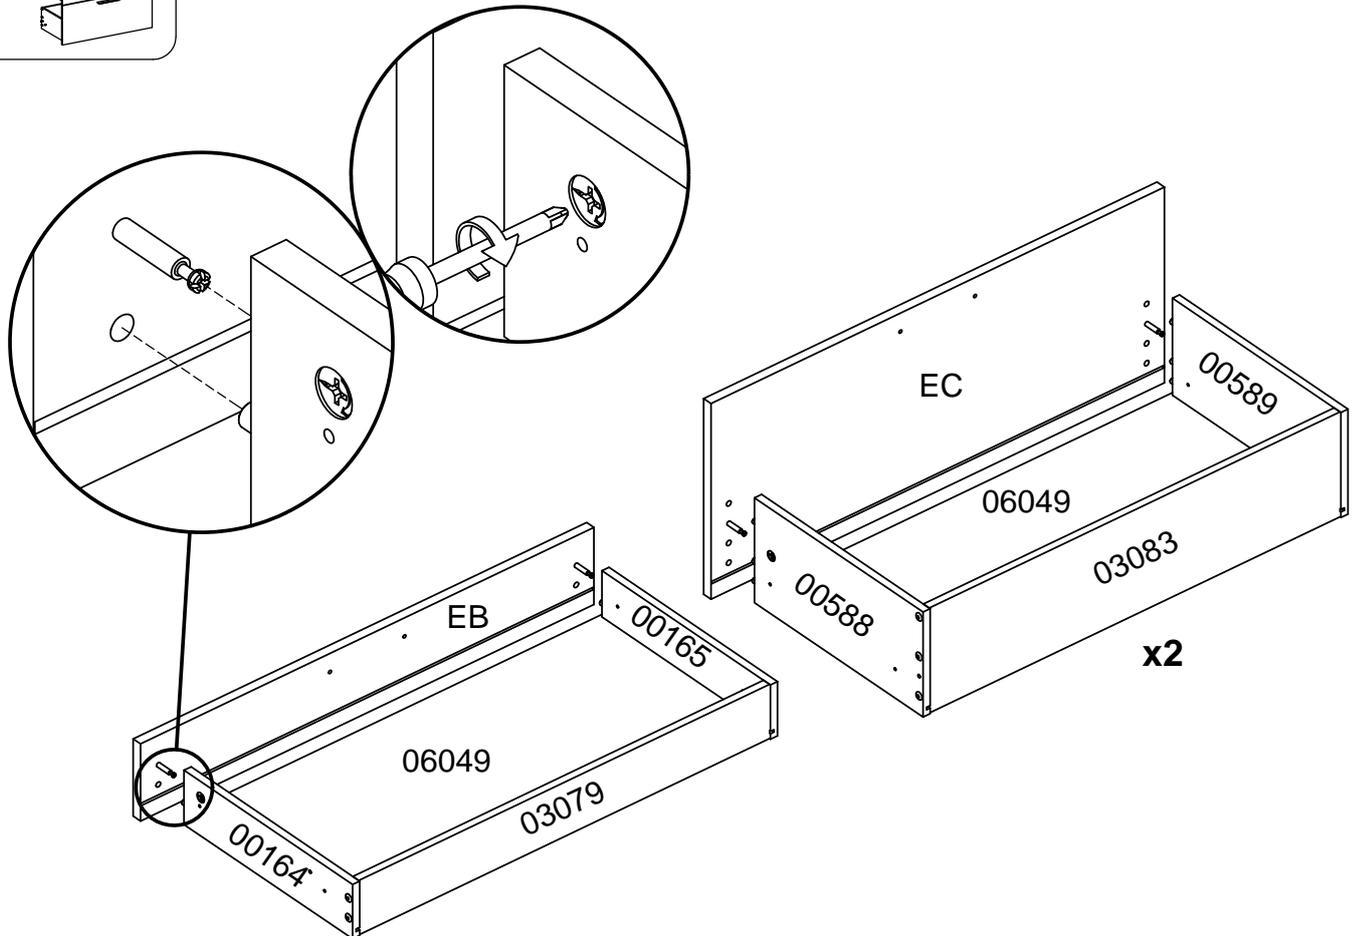


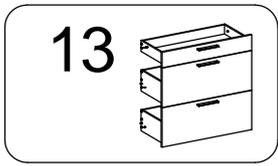

# 11011  
x6

# 26228  
x6

# 81120  
x3

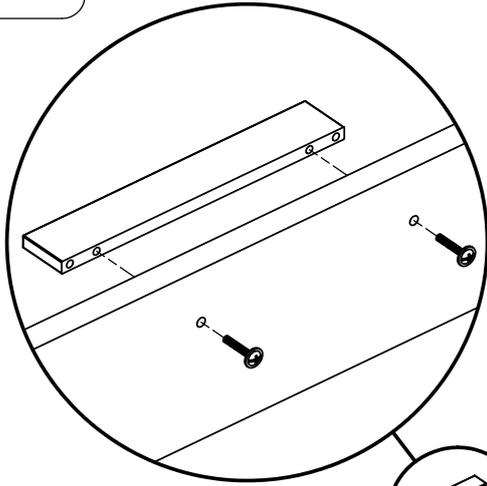





EB

06049

03079

00165

00164

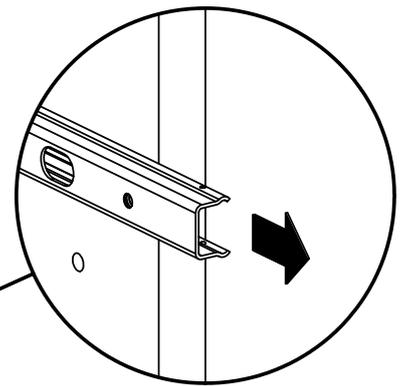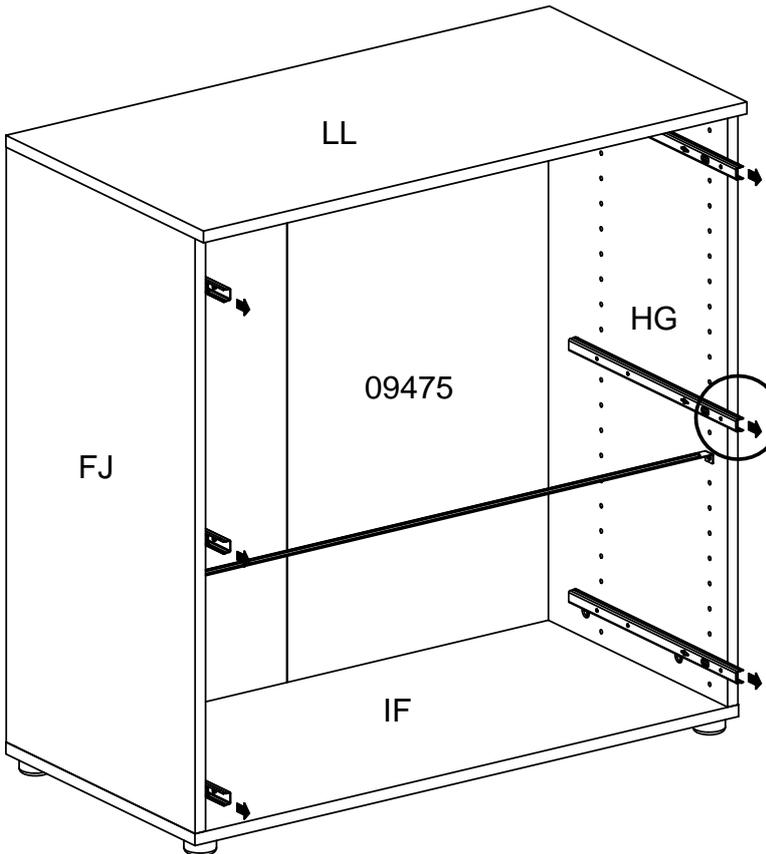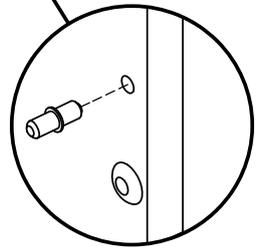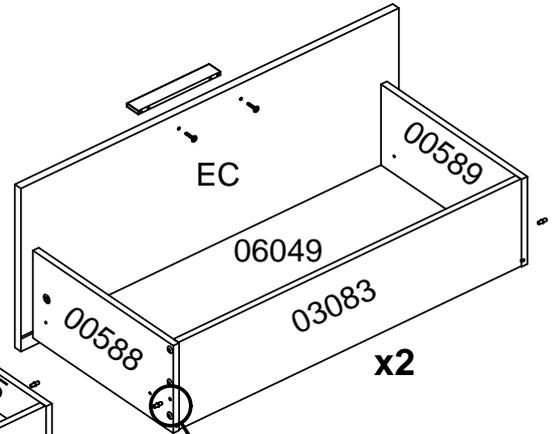

15



# 26221  
x12

